

EN



# USER MANUAL



 **MONOLITH**

## TABLE OF CONTENTS

- 01 \_\_\_\_\_ WARRANTY
- 02 \_\_\_\_\_ IMPORTANT SAFETY NOTES
- 03 \_\_\_\_\_ ASSEMBLY
- 04 \_\_\_\_\_ ASSEMBLY
- 05 \_\_\_\_\_ CONTENTS
- 06 \_\_\_\_\_ CARE AND MAINTENANCE
- 07 \_\_\_\_\_ WARRANTY & CONTACT
- 08 \_\_\_\_\_ WARNING!



## ⚠ ATTENTION!

This manual contains **important information** about the correct use and handling of the lighter. **Before using** the lighter it's important to read and follow the instructions and warnings written in this manual. Keep this manual for future reference.

**We only grant a guarantee if** these operating instructions have been read completely and handed in with the bill.

## #monolithgrill

Get inspired!  
Follow and tag  
us on:



Monolith Grill



monolithbbq



Monolith Grill

## join the club!

Join our grill community  
on Facebook and  
Instagram.

„Monolith  
Owner's Club“



### IMPORTANT!

Please carefully read the operating instructions before assembly and the first use. If you have concerns about the packaging, the individual parts or the product, please contact your dealer **before using the device for the first time**. Only the **original packaging** provides secure protection for transport and this same packaging should therefore be reused for any product returns.

The limited lifetime warranty applies to our products, refer to our homepage [www.monolith-grill.eu](http://www.monolith-grill.eu) for full details.

For spare parts and repair requests please email pictures directly to your dealer **quoting your receipt reference**.

If necessary, we may contact you directly. Please note that **a detailed written description** of any problem generally leads to a faster resolution than telephone conversations. Working this way, your dealer can check everything, add further details and then quickly rectify the situation.



### CONGRATULATIONS!

....on your purchase from the Monolith Grill GmbH and the trust placed in us. We hope you enjoy it and have **"good embers"** at all times!

Please read and understand these instructions prior to assembly and / or your initial cook.

This grill is **exclusively for outdoor use**. Never use the grill in a closed room because toxic gases can build up. Never use the grill under flammable roofs or shelters. Keep children and pets away from the grill.

Before using, make sure that the grill is positioned on a sturdy and level surface and check the grill for signs of damage. We recommend that you use Monolith charcoal and light the charcoal with our Mono Lighter (item no.: M-001) which conforms to EN 1860-3 safety standards. **Never use alcohol or petrol or any other chemical to ignite!** When lighting your grill, ensure that it is positioned at least 3m away from any potentially flammable materials.

**The grill operates at high temperatures** and should therefore not be moved while lit and never leave a burning fire unattended because hot smoke can build up. Always open the lid carefully and slowly so that air can first enter the grill and so minimise the risk of a flare up.

Always let the grill cool completely, before emptying, moving or storing it. Build the grill according to the assembly instructions and only use the components provided. Prior to assembly, check that the actual delivered parts correspond with the parts list and instruction manual provided.



#### Curious?

Discover the entire range of accessories and the numerous cooking styles possible:  
Visit our website

[www.monolith-grill.eu](http://www.monolith-grill.eu)  
[www.monolith-icon.com](http://www.monolith-icon.com)  
or our Youtube channel  
**Monolith Grill:**





### WARNING

Handle the parts with extreme care. Incorrect installation can cause injuries. **NOTE:** Read and understand all instructions before starting assembly. If you have any questions, please contact your dealer!

#### STEP 1 The cradle



#### STEP 2 Place ICON in the cradle



**Attention:** To avoid the possibility of damage and/or injury, ensure that the pre-assembled cradle is sited on a flat, stable surface.

Now carefully guide the ICON into the cradle taking care to ensure that the side with the protruding BBQ Guru nozzle is inserted first.

#### STEP 3 Insert the firebox frame



Now place the fire box metal frame in the grill and position the ash removal opening to line up with the air intake vent on the body.



Now place the four individual fire box segments into the metal frame.



Lastly, when the fire box is complete, insert the cast iron charcoal grate.

#### STEP 4 Use & Care



Simply insert the stainless steel cooking grate, close the lid and you're ready to grill over direct heat.



Create a 2nd level and expand your cooking area by inserting the warming rack (accessory item no. 201023).



For indirect cooking such as smoking, roasting, baking etc. you will need the deflector stone and support frame (accessory item no.102024)

#### STEP 5 Detaching the lid

Your ICON lid is specially designed to be easily removed so now you can use a fire plate.

**Attention:** take care to follow instructions in sequence to minimise the risk of injury.

Open the lid and loosen the two wing nuts at the back of the grill on either side of the hinge.

Do not remove the lid from the closed position.



Now hold the lid by the handle and lift it out of the hinge mechanism while taking care to keep your fingers away from the hinge.

## STANDARD ACCESSORIES



**Dual-Disc Ventilation Cap**  
Item-No. 201059-J



**Stainless Steel Cradle**  
Item-No. 102027



**Divided Fire Box**  
Item-No. 201053-J



**Stainless Steel Grill Grate**  
Item-No. 201060-J



**Cast Iron Fire Grate**  
Item-No. 201066-J



**Grid Lifter**  
Item-No. 206000



**Ash Shovel**  
Item-No. 207042



**Thermometer**  
Item-No. 201057-J



**Bamboo Handle**  
Item-No. 201064-J



**User Manual**  
Item-No. 20000-HB

Make sure the ICON is positioned on a **stable, flat, heat-resistant and non-flammable surface** and away from flammable objects.

Make sure that the ICON has a clear air gap of at least **1.5m distance** from other surrounding objects.

To light a fire, place charcoal over the the charcoal cast iron grate. Now position the MonoLighter (accessory M-001) close to the charcoal and

ignite it. As soon as the charcoal sparks, pull the MonoLighter away from the charcoal and "blow dry" the nest of embers to the desired intensity.

Now close the lid and fully open both the lower ventilation slider and the exhaust daisy wheel on the top. It is best not to stoke the fire once lit, the glow of the embers will naturally spread of their own accord. **Please use heat resistant gloves** once lit and when handling hot ceramics or charcoal.

## OPTIONAL ACCESSORIES



**ICON Fireplate**  
Item-No. 102021



**Wok Crown**  
Item-No. 102022



**Deflector stone incl. Lift**  
Item-No. 102024



**Cast iron grid Junior, ICON compatible**  
Item-No. 201029



**Pizza stone Junior, ICON compatible**  
Item-No. 201025



**Charcoal basket Junior, ICON compatible**  
Item-No. 201046-J



**WOK Set**  
Item-No. 207013



**ICON cover**  
Item-No. 102028

You can find many more optional accessories at your vendor or on our website [www.monolith-icon.com](http://www.monolith-icon.com)

## 07 WARRANTY & CONTACT

### **Congratulations on your decision to buy a Monolith product.**

In accordance with European warranty law (amended on January 1st, 2002) there is a statutory warranty period of 2 years within the EU. In addition to the statutory warranty, we offer a **"limited lifetime" warranty** on individual parts, see our website for details.

The warranty period begins when the retailer hands over the product and provides you with a proof of purchase receipt. Please keep this receipt safe for the duration of the warranty period. The guarantee does not apply to: Any part of the product that is not related to the functionality of the product. Normal wear and tear unless it is a production or material defect. Damage due to improper use, force majeure, repairs not carried out by approved engineers and use of non-standard Monolith replacement parts.

Justified warranty claims include situations where: The claimed damage or defect was evident at the point of handover from retailer to customer. The defect applies to a part not considered to be subject to normal wear and tear. The damage or mistake has occurred despite the device being used as intended.

If you have any questions about your ICON, please contact your retailer.

We wish you lots of fun and success with your new device!

Your  
Monolith-BBQ  
Team

 **MONOLITH**

## 08 WARNING!

**1. PLACE FOR THE MONOLITH** Always choose a hard and level surface. Take the weight of the MONOLITH into consideration. Do not place the Monolith directly on or in the vicinity of combustible materials. Remember sparks and the hot exhaust air are also potential fire hazards, therefore do not place under a patio-roof or canopy. Do not use the Monolith indoors. Always place it outdoors with adequate air circulation.

**2. LIGHTERS** Never use any fluid or chemical accelerants, never use petrol or spirit! Chemical or liquid accelerants, can be absorbed by the ceramic unit and may adversely affect the flavour and quality of the food.

**3. INDOOR USE** Due to smoke emissions we recommend not using the Monolith indoors. Always place it outdoors with adequate air circulation.

**4. CAST IRON VENTILATION CAP** Please refrain from looking inside the cast iron ventilation cap. Sparks and the hot exhaust air can cause injury.

**5. FIRE DANGER** Do not leave the grill unattended. Sparks and the hot exhaust air can cause inflammable objects in the vicinity to ignite.

**7. CHILDREN AND PETS** When using the Monolith, do not leave children and pets unattended close to the grill.

**8. LOCAL ORDINANCE & REGULATIONS** Observe the local ordinance and regulations before using the grill.

**9. PLACING / REMOVING COMPONENTS** The grill and its metal components can get very hot, please wear gloves or use tongs when placing the metal grids, pizza stone or deflector stone in the grill or when removing them. Do not place hot components on inflammable or sensitive surfaces. Please exercise caution when handling the hot components in order to avoid injuries. Do not try to remove the firebox or charcoal basket when filled with hot coals.

**10. BACKDRAFTS** Once lit, the Monolith lid should always be opened slowly and with extra caution to prevent dangerous flare ups or backdrafts. By only opening the lid about 4-5 cm, oxygen can slowly fill the Monolith, this helps avoid a backdraft. Should you have a backdraft, immediately close the lid and both air vents. It is always advisable to wear heat resistant gloves, and not to stand directly in front of the grill.

**11. OPENING AND CLOSING THE LID** The ceramic lid is held in an open position by means of tension springs. Do not underestimate the heavy weight of the lid. Never let the lid drop when closing, make sure that no body parts or grill tools are between the unit base and lid. By simply releasing the handle, both the lid and/ or base can be damaged through the weight and force of the lid. Replace damaged springs immediately.

**12. EXTINGUISHING THE CHARCOAL** By closing both of the air vents, the embers will extinguish, this will take approximately 10 – 20 minutes. Never use water to extinguish the charcoal.

**13. RISK OF BURN INJURIES** Due to the very good insulation of the heavy ceramics, there is minimal risk of burn injuries when touching the outside walls of the Monolith. We still recommend using precaution and keeping children and pets away from the grill whilst in use.



MONOLITH Grill GmbH | Frida-Schröer-Straße 56  
49076 Osnabrück | [info@Monolith-grill.de](mailto:info@Monolith-grill.de)

[MONOLITH-GRILL.EU](http://MONOLITH-GRILL.EU)